



M+M Quad Rail Installation Instructions


1. Make sure your rifle is unloaded and ensure that there is no ammunition in the chamber.
2. Remove the receiver cover, recoil spring, and bolt from the rifle.
3. Remove any fore end assembly previously installed on rifle.
4. Lock down the lower hand guard latch.
5. Place lower hand guard in the space between receiver and hand guard latch and press firmly. May need to tap in with non-marking hammer.

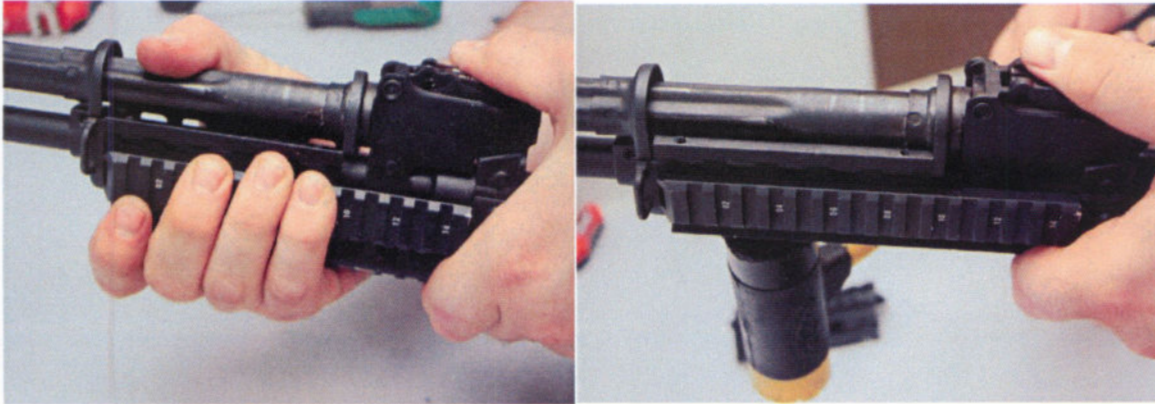

6. Place upper handguard over gas tube and press into place and press firmly. May need to tap into place with non-marking hammer.

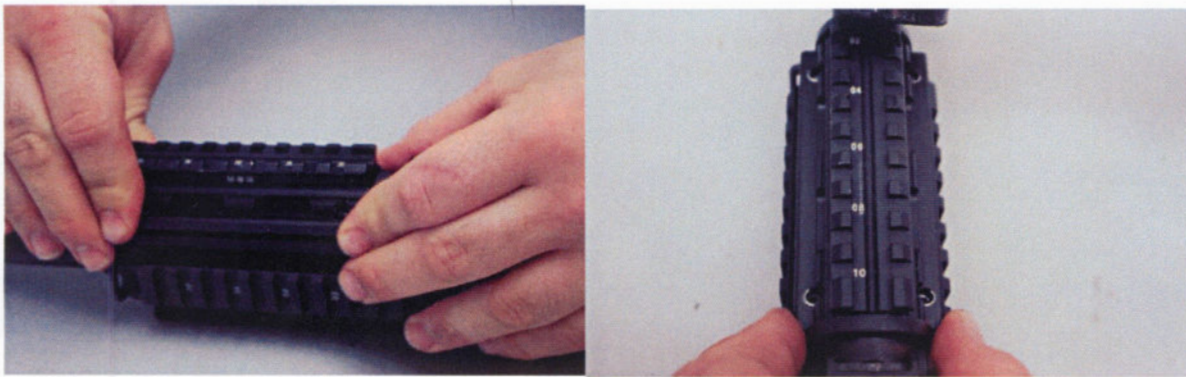

7. Tap the upper hand guard from front or back to align the screw holes.
8. Install the four included screws hand tight. DO NOT over tighten.

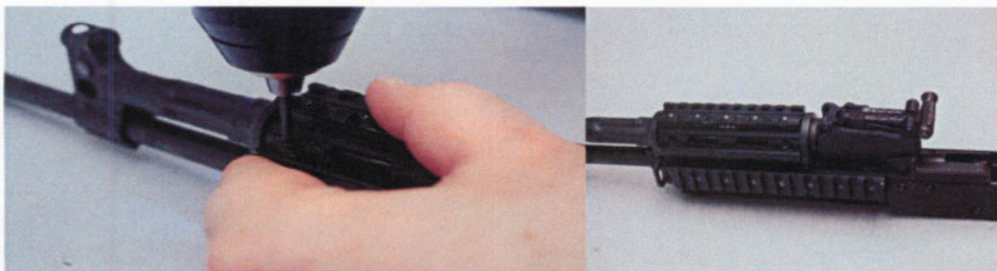

9. Reinstall the bolt carrier, recoil spring and receiver cover.
10. Function check your rifle to make sure you are not over compressing the gas tube with the quad rail system.